

Remove the oil door and two screws using #2 phillips screwdriver  
Remove the side cover and set aside



Remove 3 airbox nuts/bolt using 10mm socket  
Leave the gasket in place



Push hose onto barb (use hose clamp if necessary). Install adapter and route hose as shown



Optional: For quick switching between gasoline and alt fuels, install a lock off valve here.  
Sold separately



Remove bushings, one will be re-used later



Re-install airbox with barrel nuts use washers if necessary.  
Re-connect hose



Re-use bottom airbox bolt. Use bushing for spacer with loctite



Re-install airbox  
Connect hose



Re-install side cover and continue to step 5 of the installation instructions

